

Summer is over! Now it's time to adjust your thermostat from Cool to Heat



1. Press the “SYSTEM” button until the word “HEAT” is flashing. Then press “DONE” (lower left square changes from “SCHED” to “DONE”). The “HEAT” will stop flashing.



2. Temporarily set the temperature to higher than the current room temperature (example 24°C). “**WAIT**” will show in the lower right just below “**SET TO**” temperature display.

A faint “click” will be heard and the heat will come on. “**WAIT**” will now disappear and “**HEAT ON**” will appear.

(Note: on some systems there could be a 10-15 minute delay). Once you hear the fan running, you should feel warm air at the vent.



Additional troubleshooting tips

- Press **SYSTEM** to set the system to **HEAT**. Make sure the temperature is set higher than the inside temperature
- Check circuit breaker and reset if necessary
- Make sure power switch at heating and cooling system is on
- Make sure furnace door is closed securely

If after these steps the heating does not come on, (could take anywhere from 5 to 15 minutes) please contact **peaksaver®** at **1-866-323-0206**

peaksaver® is a registered trademark of Toronto Hydro Corporation. Used under license