

# peaksaver®

**Summer is over!  
Now it's time to adjust  
your thermostat from  
Cool to Heat**




1. Open the door and press the “SYSTEM” button until the word “HEAT” is in the upper right corner of the display.



2. The display will change to “HEAT”. Set the temperature to your desired temperature (higher than the current room temperature).

You will hear a faint “click” and the heat will come on.

(Note: on some systems there could be a 10-15 minute delay). Once you hear the fan running, you should feel warm air at the vent.

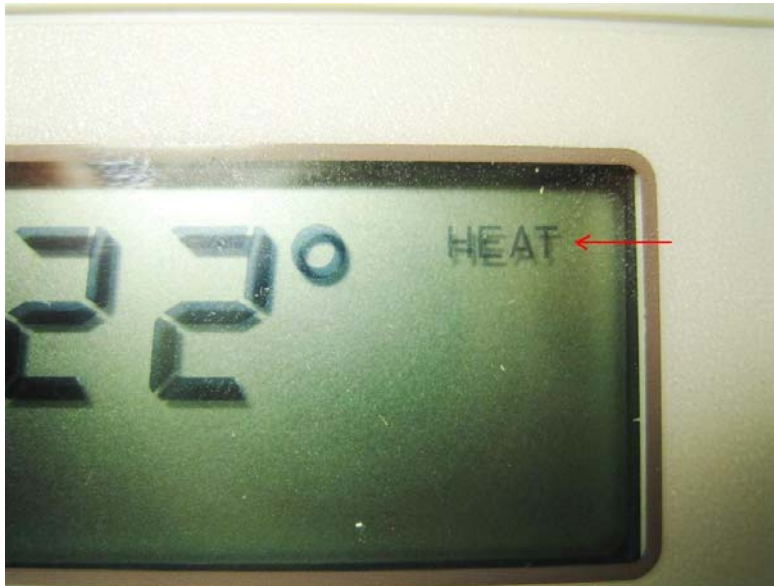

## Additional troubleshooting tips

- Press SYSTEM to set the system to HEAT. Make sure the temperature is set higher than the inside temperature
- Check circuit breaker and reset if necessary
- Make sure power switch at heating and cooling system is on
- Make sure furnace door is closed securely

If after these steps the heating does not come on, (could take anywhere from 10 to 15 minutes) please contact **peaksaver®** at **1-866-323-0206**.

**peaksaver®** is a registered trademark of Toronto Hydro Corporation. Used under license